




## SIDELITE INSTALLATION INSTRUCTIONS

PAGE 1 of 2

1. Follow steps 1-5 of door frame installation instructions.
2. Assemble strike mullion by slipping reglet into strike jamb and screwing together.
3. Set sidelite header over wall, leaving  $\frac{3}{4}$ " between sidelite header and door frame header.
4. Connect strike mullion to headers using T-clip (fig. 1). If using optional sill channel, reglet should be 1" shorter than strike jamb (1" off floor). T-clips provided with standard trim have a crease/bend, which should face inward. This will eliminate need to notch header trim over clip.
5. Proceed to section 'A' or 'B' below, depending on field conditions


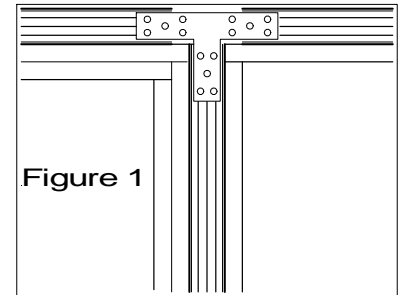


### A. For full height sidelites supplied with optional sill channel:


6. Slip sill channel under reglet, into back of strike jamb. Shoot sill channel to floor with redheads, tight to end jamb of sidelite. Secure strike jamb to sill channel with self drilling screws. Slip sill over channel (removable stop should be on secure side of room), and screw off to channel.

If there are no vertical mullions, skip step 7

7. Assemble vertical mullion(s). Set tight to head and sill. Attach mullion to head (fig. 3) and sill (fig. 4) using straight clips. Be sure to space clip at least  $\frac{1}{8}$ " from trim receiver to avoid notching trim around clips. Repeat steps 4 and 5 for each mullion.

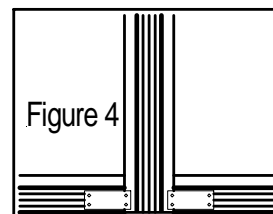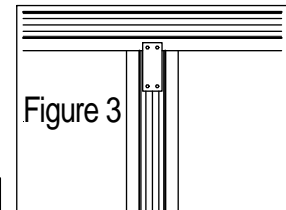

8. Attach sill to end jamb with straight clips (fig.2) Be sure to space clip at least  $\frac{1}{8}$ " from trim receiver to avoid notching trim around clips.

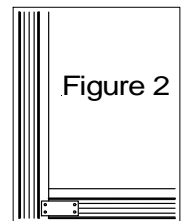


### B. For openings framed at bottom with stud/drywall or track (by others):

9. Starting at strike mullion, set sill over wall at bottom tight to mullion (removable stop should be on secure side of room). Screw off, and attach to mullion with straight clips (fig. 2). Be sure to space clip at least  $\frac{1}{8}$ " from trim receiver to avoid notching trim around clips.




*If there are no vertical mullions, skip step 10*


**10. Assemble vertical mullions(s). Set tight to head and sill. Attach mullion to head using straight clips (fig. 3). Be sure to space clip at least 1/8" from trim receiver to avoid notching trim around clips. Attach mullion to sill using T-clips (fig. 6). Repeat steps 7 and 8 for each mullion.**

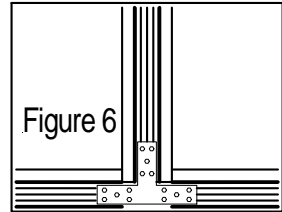

**11. Attach sill to end jamb with corner clips (fig. 5)**

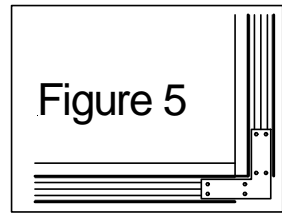

**12. Assemble horizontal mullions and attach to vertical jambs with straight clips (fig. 7). Be sure to space clip at least 1/8" from trim receiver to avoid notching trim around clips. Note that removable stop should be at top and on secure side of room.**

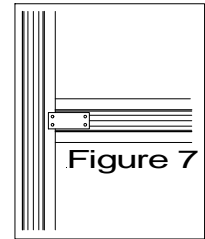

**13. Snap on trim to complete installation.**

